


Chorokey Owner's Manual

Revision A, Dec 1, 2003

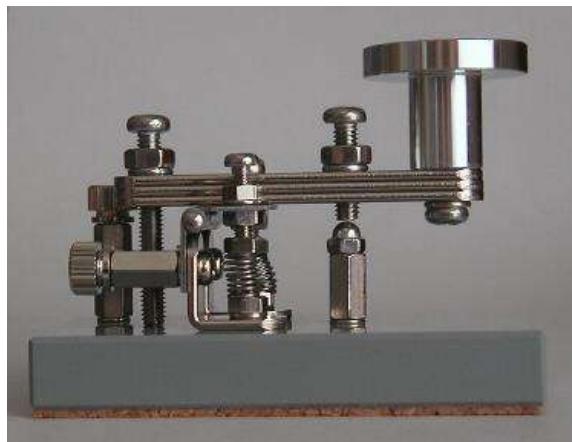

Denshin cmmunications
1-32-14 Shimura Itabashi-ku ,Tokyo
174-0056 Japan
Home Page : www.denshin.com
E-mail : Sales@denshin.com
Telephone : +81 3 3967 7805

Parts list

No.	An article name	QTY	Remarks
1	Base	1	Made by vinyl chloride
2	Cork board	1	
3	Knob	1	
4	Metal bar(A)	2	Top & middle
5	Metal bar(B)	1	Bottom
6	Hinge	1	
7	Bracket(L formed)	2	
8	Decoration bolt	2	
9	Long nut 10mm	1	
10	Long nut 10mm with capnut	1	
11	Long nut 15mm	1	
12	Spring	2	
13	Wire	1	
14	(4) Screw 30mm length	1	Pan-head
15	(4) Screw 15mm length	1	Pan-head
16	(4) Screw 10mm length	1	Pan-head
17	(4) Nut	2	
18	(4) Spring washer	3	
19	(3) Screw 6mm length	2	Pan-head
20	(3) Screw 12mm length	1	Pan-head
21	(3) Screw 15mm length	2	Pan-head
22	(3) Screw 15mm length	4	Flat-head
23	(3) Spring washer	5	
24	(3) Washer	2	
25	(3) Nut	12	If you use glue, QTY is ten. Glue is not contained in this kit.
26	Manual	1	
<p>Note: (4) means a diameter of 4mm , (3) means a diameter of 3mm</p>			

A unit conversion table

An approximate value


milli meter	inch
3mm	1/8"
4mm	5/32"
6mm	1/4"
8mm	5/16"
10mm	3/8"
12mm	15/32"
15mm	9/16"
20mm	25/32"
25mm	31/32"
30mm	1-5/32"

Diameter of screw


An approximate value

milli meter	inch	note
3mm	No.5	not compatible
4mm	No.8	not compatible


(4) screw means a Diameter of 4mm
(3) screw means a Diameter of 3mm

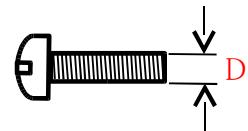


Gauging of Length Pan-head Flat-head

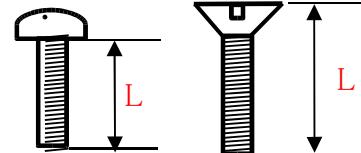


(1) Confirmation of a metal bar with four holes

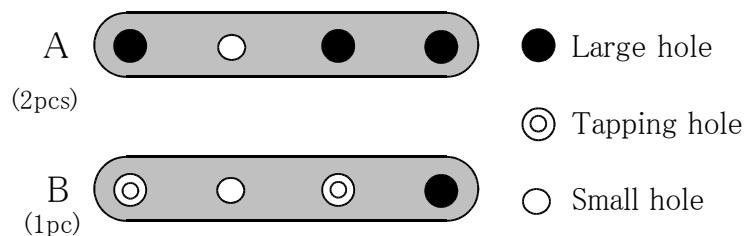


(2) Fix a hinge to bar

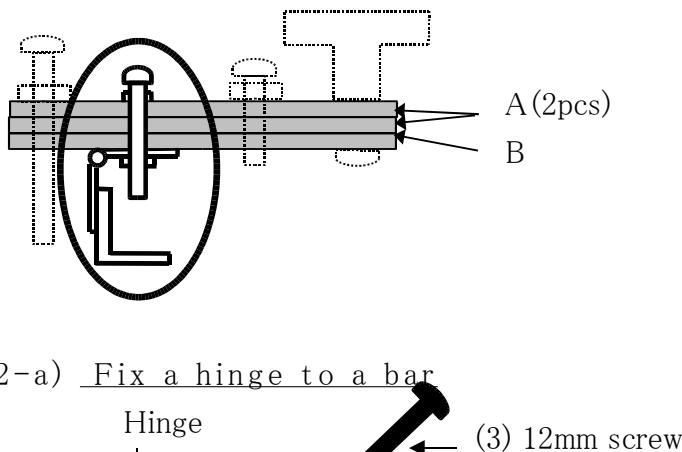


(2-a) Fix a hinge to a bar

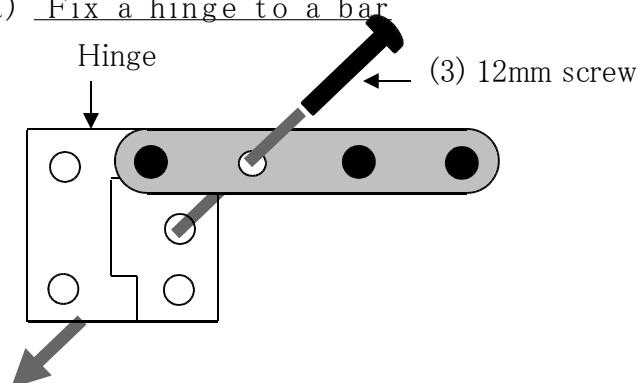

(2-b) Fix a hinge to a bar

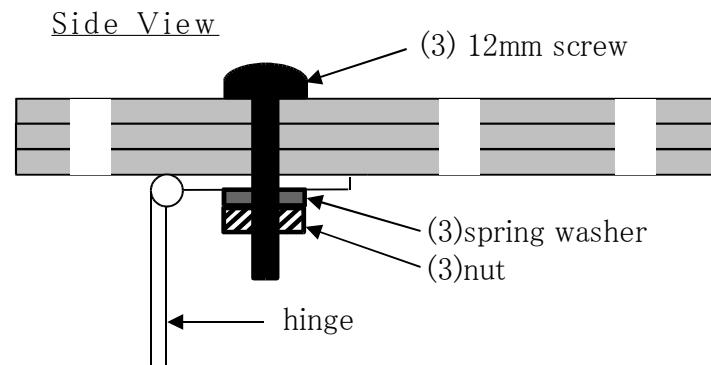

(2-c) Fix a hinge to a bar


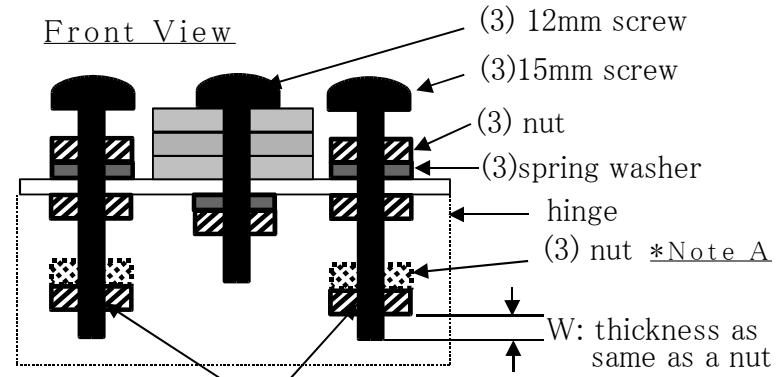


Fix this nut and a screw with a little glue. (Both sides)
 (Do not glue other nuts.)


*Note A

If you have not a glue, you may fix this nut with the nut ().


(3) Bars and position relation with other parts

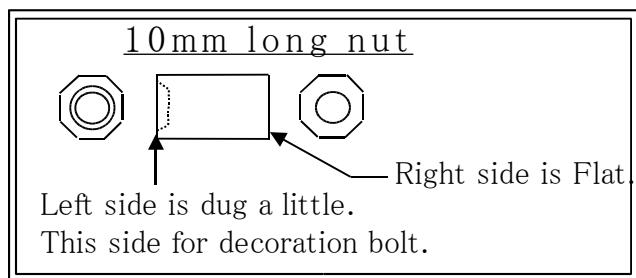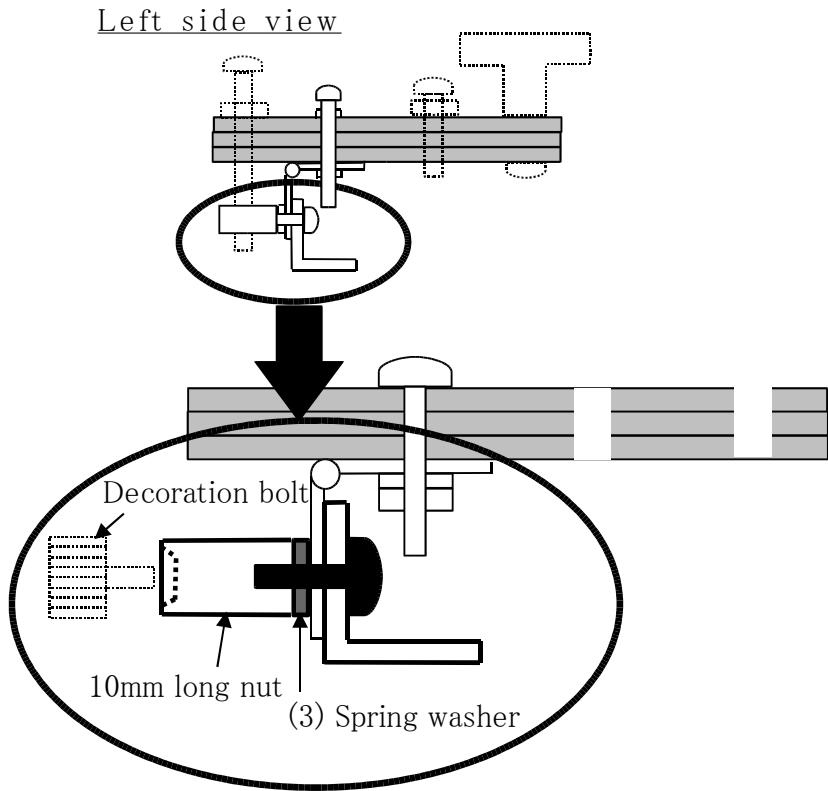


Right side view

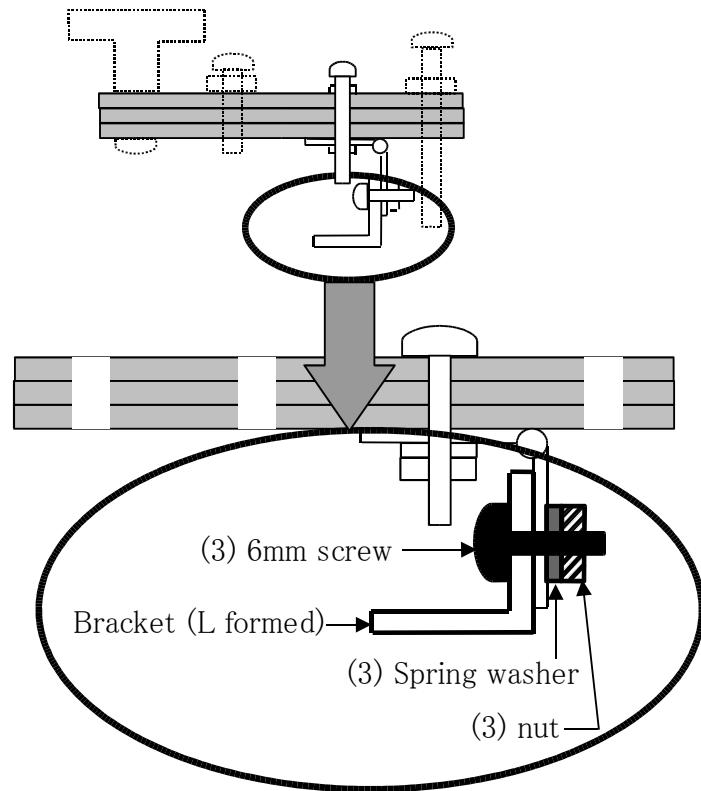


Front View

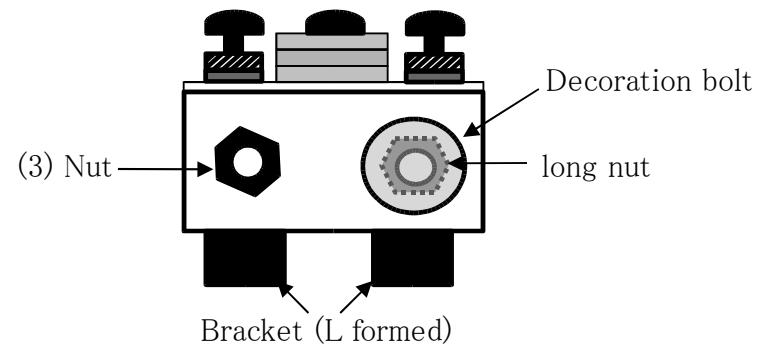


(4) Knob & (4)screw assembly

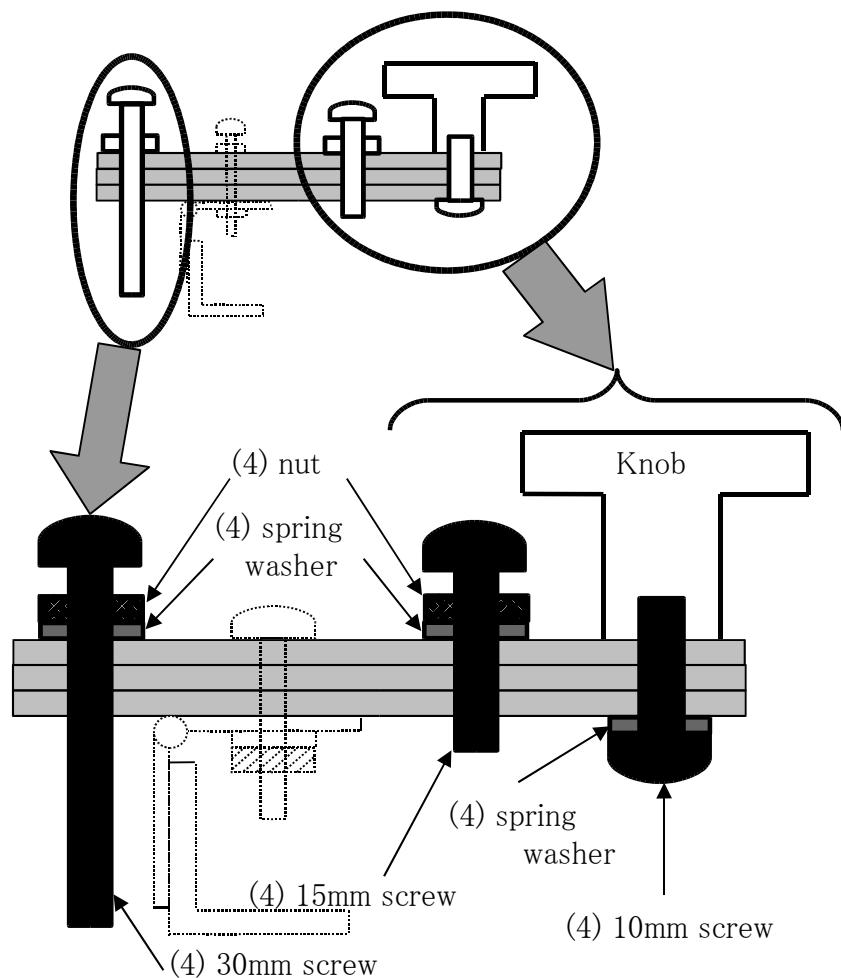

(5) Base assembly

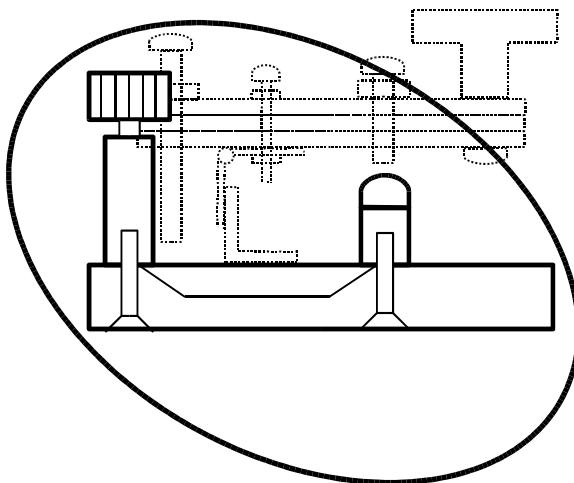


(5-a) Bottom view (wiring)

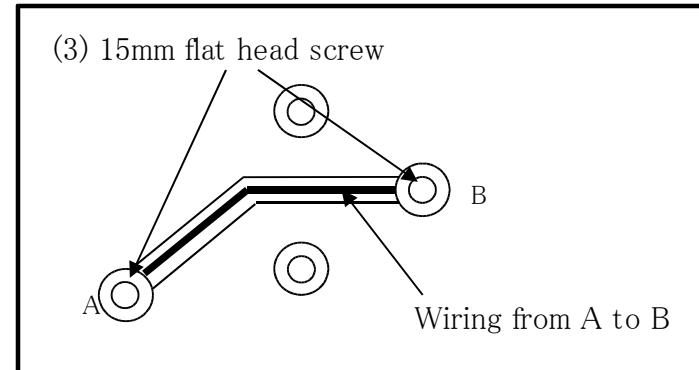


Please refer to next “(5-b) Terminal & contact”.


(5-b) Terminal & contact

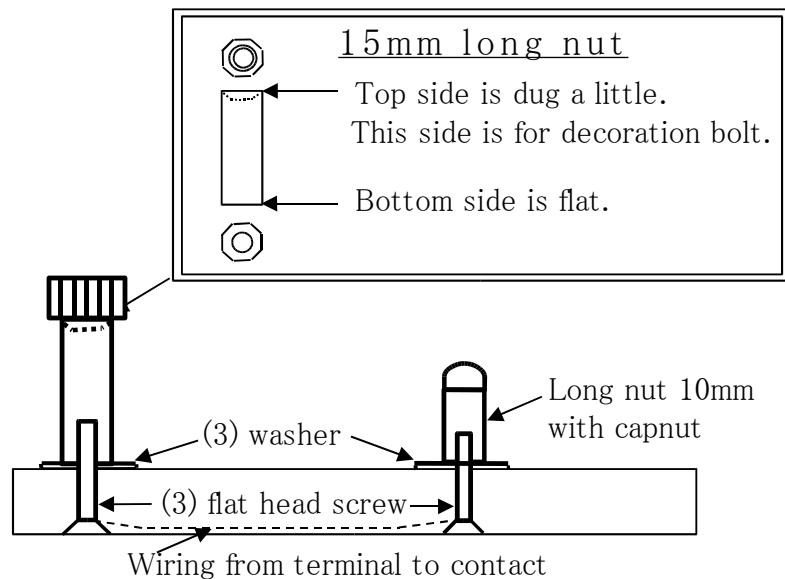

(6) Final assembly

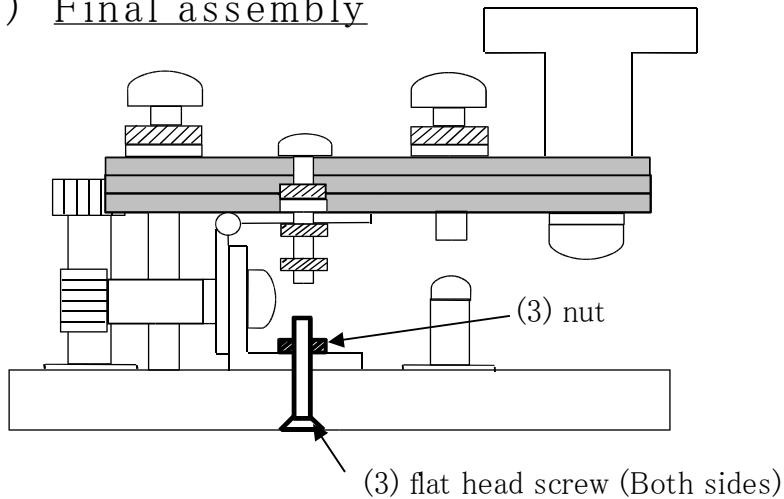

(7) How to insert the springs

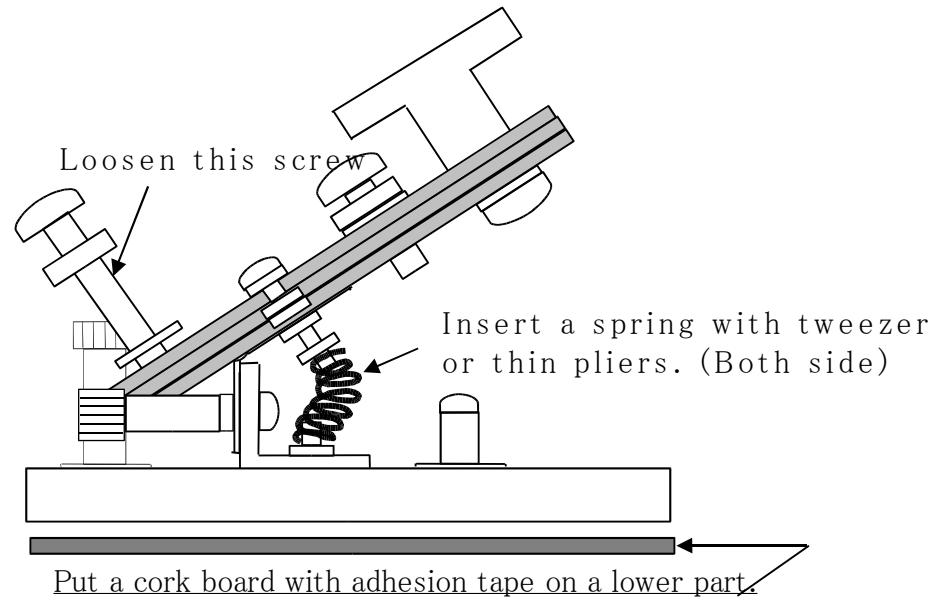

(8) Adjustment

(a) Level adjust

(c) Strength adjust (Both side)

(b) Gap adjust

